

Instruction Manual

All-in-one Waterfall Kit MFW-08/MFW-12

Thanks for buying our waterfall kit. To ensure you use the product safely and correctly, please read carefully and thoroughly this instruction. Please note that we are not responsible for any failure caused by misuse or improper maintenance.


SAVE THIS INSTRUCTION FOR FUTURE USE.

Important Safety Cautions

1. Please operate the appliance under the rated voltage and frequency indicated on the rating label or instruction manual.
2. A 10mA or 30mA residual current device must be fitted to the mains supply.
3. The power cord is not replaceable. If the power cord or the plug is found hurt or damaged, or the plug is found aged, stop using the pump immediately. Return the pump to the retailer/distributor for disposal, or dispose it by yourself. Do not attempt to shorten the power cord, or to remove the plug. Failure to meet this point may cause damage to the pump.
4. If abnormal smell or noise is found to the pump, unplug it immediately and check the cause. Contact your retailer / distributor if needed.
5. Make sure your hand and the plug are dry when plug in or unplug the pump. It is forbidden to plug or unplug the pump with a wet hand as this might cause electric shock.

6. Unplug the pump before installation and cleaning. Don't pull the power cord abruptly. To unplug, grasp the plug and pull it out from the receptacle.
7. Protect properly the pump. If severe collision happens to the pump, check if there is any damage. If there is any breakage, stop using the pump and destroy it.
8. Do not let the pump run dry as this will damage the rotor and will cause over-heating of the motor.
9. Do not operate or leave the pump in freezing conditions.
10. Do not use the pump in inflammable or corrosive liquids. The pump should work in the environment less than 35 °C (95F).

Product Diagram - Waterfall Spillway

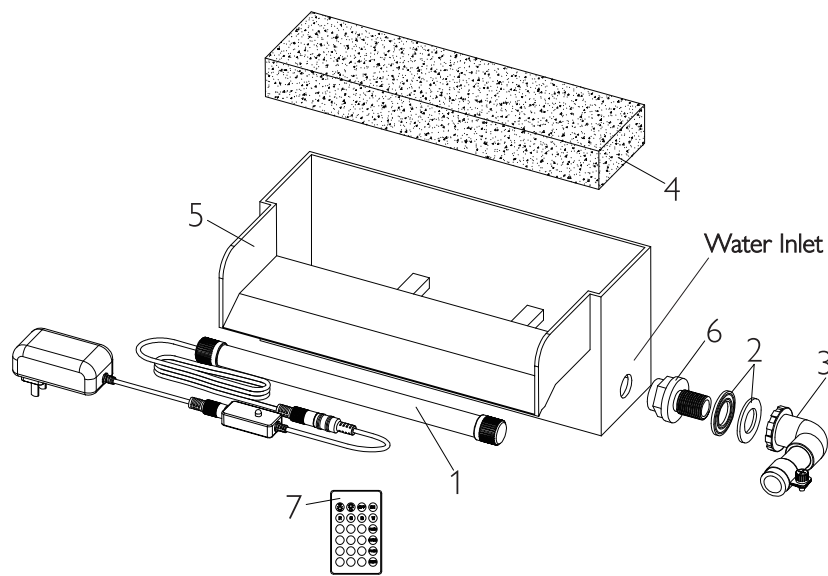


Components:

- | | |
|-------------------------|---|
| 1- LED light | 6- Plug of hose adapter (installed inside spillway) |
| 2- Sealing rings (2pcs) | 7- Remote control |
| 3- Hose adapter | |
| 4- Sponge | |
| 5- Waterfall spillway | |

Assembly of the Waterfall Spillway

1. Take all the components out. Make sure no components are missed according to the diagram above.
2. Take the sponge out from the spillway. Then install the hose adapter to the round hole (Water Inlet) at the side of the spillway. Follow the instruction below:

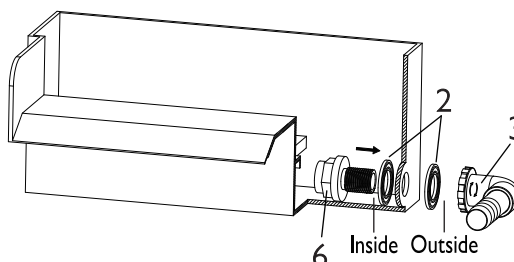


There are 2 sealing rings in the package. It is very important that a sealing ring should be placed at both the inside and outside of the spillway hole. The nut should be firmly tightened to avoid leakage.

3. Fit the corrugated hose to the above adapter and tighten with the hose clamp.
4. Put the sponge back to the inside of the spillway.

Note: the sponge works as a "stabilizer" of the water as when water enters the spillway, there will be turbulence, which will cause the waterfall not smooth. The sponge helps relieve the turbulence so that the waterfall is smooth and more beautiful.

Product Diagram – Filter Box

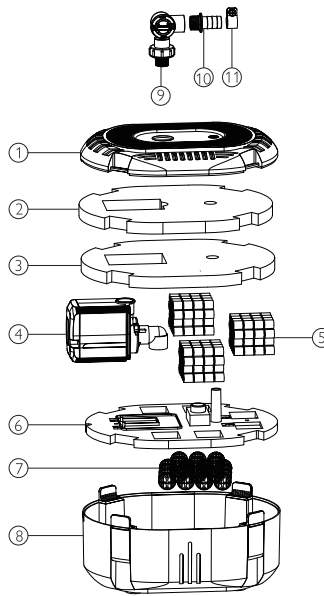

Components:

- | | |
|---------------------------------|-------------------------|
| 1 - Filter box cover | 9 - Connector (to pump) |
| 2 - Coarse filter sponge (blue) | 10 - Hose adapter |
| 3 - Fine filter sponge (yellow) | 11 - Hose clamp |
| 4 - Water pump | |
| 5 - Ceramic rings (3 bags) | |
| 6 - Pump locating plate | |
| 7 - Bio balls | |
| 8 - Filter housing | |

Assembly of Filter Box

1. Take all the components out. Make sure no components are missed according to the diagram above.
2. Clean the components.
 - Release the cover of the filter box by pulling the 4 corner lock buckles outward.



- Tear off the protecting bag of the ceramic rings. Then put the ceramic rings into the net bag.
- Rinse all the components with clean running water.

3. Assemble the filter box.

- Put the bio balls into the filter box.

- Put the pump locating plate back into the filter box.

- Install the pump. Make sure the pump sits on the pump locators (the pins on the plate), and the inlet elbow couples with the extruded water inlet tube.

- Put the 3 bags of ceramic rings at the surrounding of the water pump. Suggest putting a bag at the left / right / front side each of the water pump respectively.


- Put the sponge on the top of the pump. Make sure the coarse (blue) sponge is on the top and the fine (yellow) sponge is underneath.

- Put the filter box cover back and lock with the 4 corner lock buckles by pressing the locks inward.

- Screw the elbow hose adapter onto the water outlet of the filter box.



Final Assembly

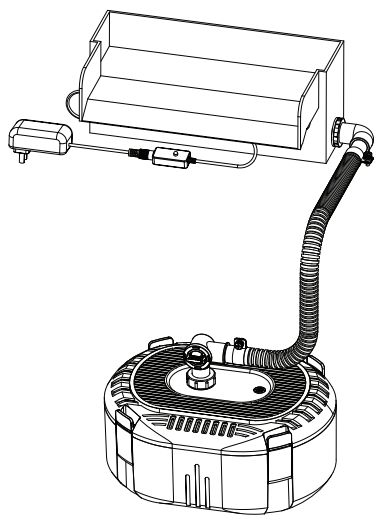

- When both the waterfall spillway and the filter box are assembled, connect them with the corrugated hose and tighten with the hose clamp.
- The LED light is pre-installed under the spillway lip. Point the remote controller at the receiver on the power cord close to the power plug to control the LED light.

IMPORTANT – Pull off the film at the bottom of the controller before use. The film works as a insulator for the battery to avoid power leakage during transporation.

Installation of the Waterfall Kit

There are many ways of creating a beautiful waterfall. Check with an expert or follow the instructions on internet to find your favorite option.

Make sure the spillway is positioned in a leveled place. In the meanwhile, the place should be easily accessed for maintenance.

The flow rate can be controlled by the regulating knob on the hose adapter. Adjust the flow by turning the knob to get the best vew of the waterfall before final installation.

Maintenance

How often should the maintenance to be implemented? It depends on the environment in your pond. If obvious loss of flow is observed to the fountain, it is time to do the maintenance, in most of the time you only need to clean or replace the filter sponge.

Whatever, you should at least do a through maintenance to the pump once a year.

Filter Sponge

Open the filter box, clean the sponges with running clean water.

When installing back, make sure the sponges are in the correct order – the coarse (blue) sponge is on the top and the fine (yellow) sponge is at the bottom.

Ceramic Rings / Bio Balls

Special attention should be taken to the maintenance of the Ceramic Rings / Bio Balls. Ceramic Rings / Bio Balls provide great environment for the growth of the beneficial bacterial, which helps maintain a healthy biological environment in your pond. DO NOT clean the Ceramic Rings / Bio Balls too often. Suggest only do the cleaning once a year. Only use **water from the pond** to do the cleaning to ensure the beneficial bacterial not been killed by fresh new water.


Water Pump

This pump is free from lubricants or special maintenance. However, to keep the pump operates in the best condition, regular maintenance and cleaning is needed. It is recommended to maintain the pump at least **once half year**. However, if loss of flow is found to the fountain, and cleaning of the sponges still can't resolve the problem, the water pump should be maintained.

Do not pull the power cord to lift the pump as this may cause damage to the power cord.

To clean the pump, follow the steps above to open the filter box cover, and take out the sponges.

1. Take the water pump out from the filter box.
2. Remove the impellor cover (the part connecting to the elbow) by turning counterclockwise to release the lock. Gently pull away the impellor cover from the motor body. Make sure the O-rings are not missed.

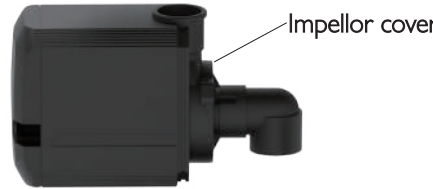

3. Carefully take out the impellor/rotor assembly.
4. Wash out all of the components in clean water. Do not use detergents or other chemical cleaners.
5. Reassemble the pump in the reverse order.

- For wearing parts like the impellor kit, approach the local retailer / distributor for replacement. You need to pay for the wearing parts if the pump has been used for over 1 year.

Troubleshooting

The pump doesn't pump water

- The pump is not started up.
- The power doesn't match the voltage and frequency specified on the pump.
- Water inlet or outlet is blocked.
- Impellor or rotor is damaged.

Water flow is reduced

- The voltage is lower than the rated voltage.
- Wastes are accumulated in the filtering system and the sponges needs to be cleaned.
- Impellor or rotor gets worn out and needs to be replaced.

The pump is noisy

- Water inlet is partially blocked.
 - Water level is lower than the inlet of the pump. Air enters into the pump to cause noise.
 - Rotor is worn (need to be replaced)
- Seek for your local retailer / distributor's help if the above troubleshooting can't resolve the problems.

Product Specifications

Model	MFVW-12	MFVW-08
Freq./Volt	120V/60Hz	
Power	40W	35W
Max. Flow	850GPH	550GPH
Max. Headheight	9ft	8ft
Spillway Dimension	12"x3.5"x2.7"	8"x3.5"x2.7"

Optional Upgrade – UV Lamp to Tackle Algae Bloom

If you have an issue with algae bloom (green water), you are strongly suggested to add the UV lamp to your filter box. The UV lamp can be easily installed to the filter box (the place reserved for the UV lamp is at the down side of the pump locating plate)

Users can buy it online. Make sure you buy our UV light specifically designed for this filter box.

1 YEAR STANDARD WARRANTY

This product is guaranteed for defective parts and workmanship for a period of 1 year from the date of purchase. This guarantee is valid with proof of purchase only. The guarantee is limited to repair or replacement only and does not cover consequential loss, loss or damage to livestock and personal property or damage to animate or inanimate objects, irrespective of the cause thereof. This guarantee excludes any damage caused by unreasonable use, negligence, improper installation, tampering, abuse or commercial use.